Vacuum Cleaner
user manual

* Before operating this unit, please read the instructions carefully.
* For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Code No. DJ68-00467H REV(0.1)

SAFETY INFORMATION

WARNING

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.

WARNING

- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

WARNING	Indicates that a danger of death or serious injury exists.
CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.

safety information

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING** : Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before emptying the dust bin. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don't carry the vacuum cleaner by holding the hose.
    Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05

05 Assembling the Cleaner

OPERATING THE CLEANER 06

06 Power cord
06 Power control

MAINTAIN TOOLS AND FILTER 08

08 Using accessory
09 Maintain floor tools
11 Emptying the dust bin
12 Cleaning the dust pack
14 Cleaning the motor protection filter
14 Cleaning the outlet filter
15 Change the battery

TROUBLESHOOTING 16

assembling the cleaner

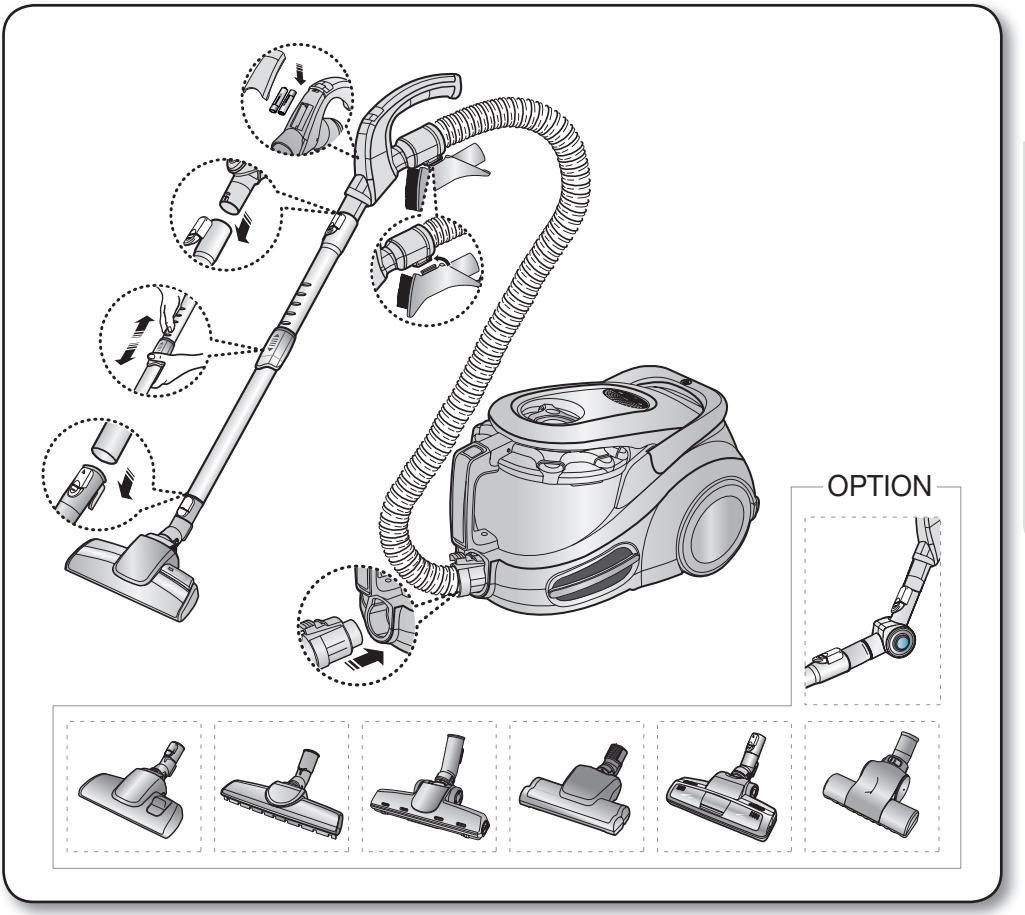

- Please do not press the button of dust bin handle when carrying machine.

- For storage, park the floor nozzle.

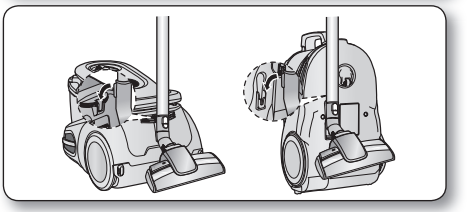

operating the cleaner

POWER CORD

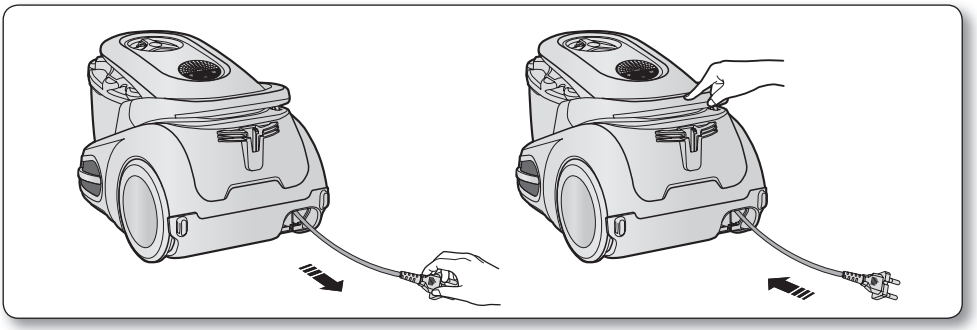

CAUTION

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

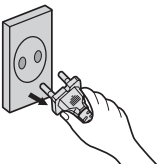

POWER CONTROL (INFRARED CONTROL)

- HOSE

1. Vacuum cleaner ON/OFF(⏻)

Press the ON/OFF button to operate the vacuum cleaner. Press again to stop the vacuum cleaner.

2. Vacuum cleaner (-,+)

Press the MODE button repeatedly to select the correct mode.
(ON) MIN → MID → MAX

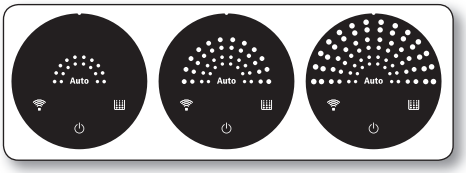

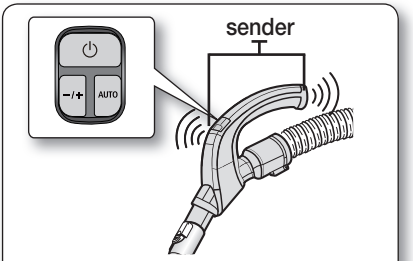

Handle Control
The cleaner is controlled by using infrared signals.

3. Using Auto mode

Press the Auto button to operate the vacuum cleaner automatically.

★ Don't cover the handle sender when you use a handle control button.

- BODY

Press the power control button repeatedly to select the correct mode.

(ON(MAX) → OFF)

If the remote control is not working, the cleaner can be operated using the control button on the body of the machine.

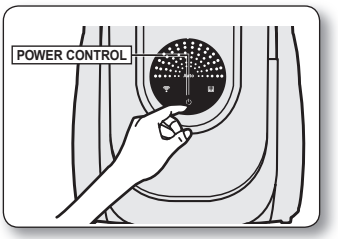

	The IR light indicates the part that receives the infra-red signal from the handle control.
	The filter light is illuminated when the dust pack requires checking or emptying. An audio signal will also sound.
Auto	This indicates that the automatic suction mode is selected. The level of suction is indicated by the LED display.

maintain tools and filter

USING ACCESSORY

Accessory

- Push the accessory on to the end of the hose handle.

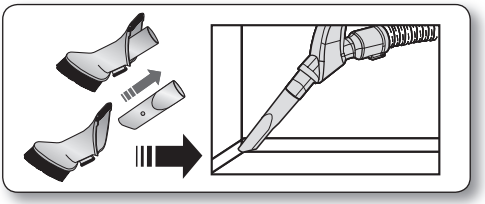

- To use the dusting tool, push the accessory on to the end of the hose handle.

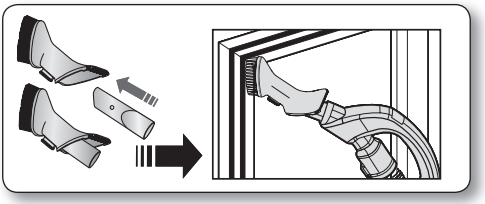

- To use the upholstery tool, push the accessory on to the end of the hose handle.

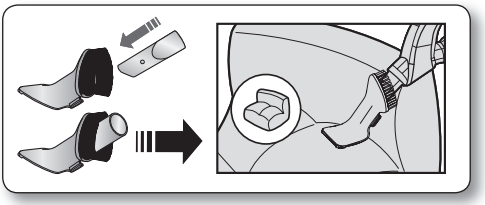

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

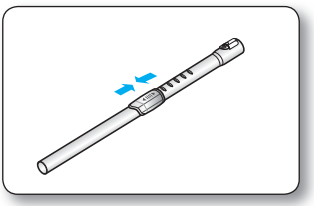

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

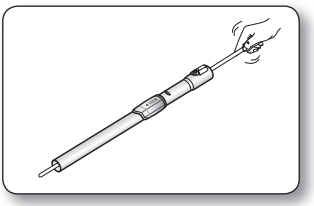

maintain tools and filter

MAINTAIN FLOOR TOOLS

Elbow Extending Tube (Option)

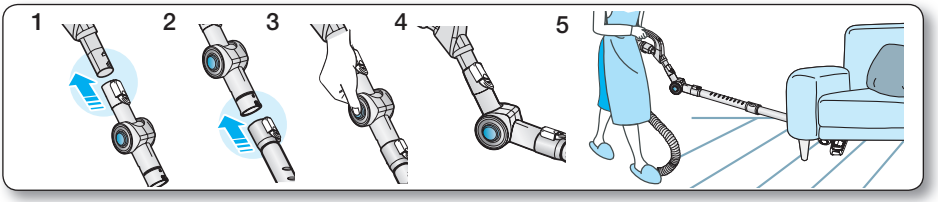

1. Connect the elbow extending tube to connecting part for hose knob and telescopic pipe.
2. Fit the telescopic pipe to the lower part of the elbow extending tube.
3. Press the PUSH button.
4. With the PUSH button pressed, the elbow extending tube is folded.
5. Using the elbow extending tube allows hard to reach areas (e.g. under furniture)to be cleaned without having to kneel down.

3 Way Brush (Option)

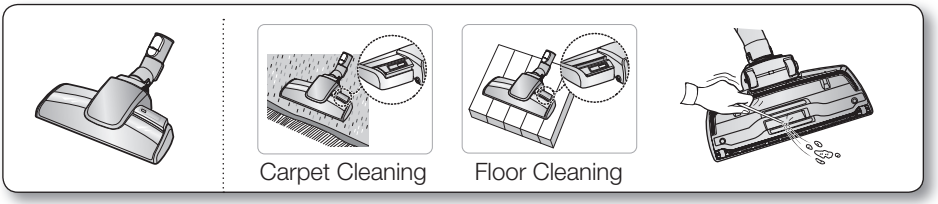

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

2-Step Brush (Option)

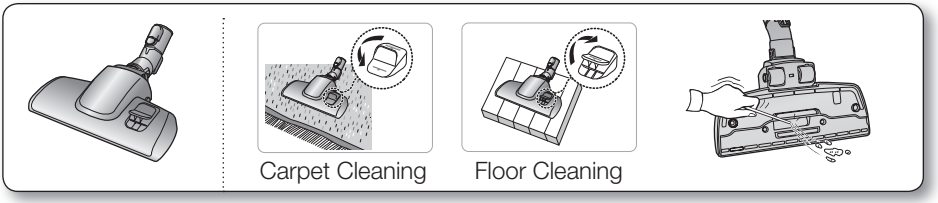

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

Parquet Master Brush (Option)

- Vacuum dust in wide area at once.
- Remove waste matter completely if the inlet is blocked.

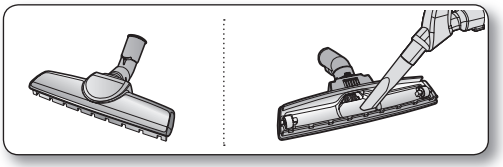

maintain tools and filter

Pet Brush (Option)

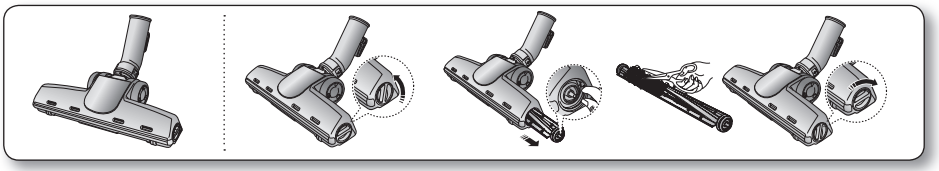

• Detach transparent drum cover for easy cleaning.

Blanket Brush(Option)

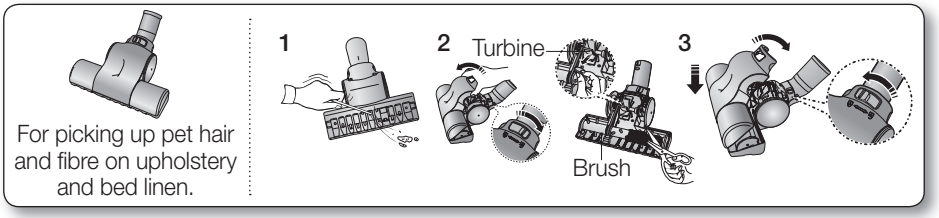

1. Remove waste matter completely when inlet is blocked.
2. Turn the lock button to (🔓), and remove.
3. To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the (🔒) position.

CAUTION Use for bedclothes only. Be cautious not to damage brush during unclogging.

Super turbine brush (Option)

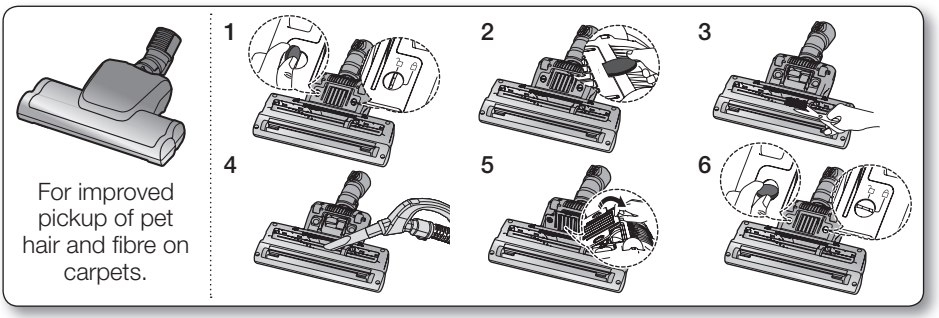

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Turn the lock button to unlock position use the like coin(🔓).
2. Remove the guide air use the like coin.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a dry duster or crevice tool.
5. Assemble the guide air.
6. Turn the lock button to lock position use the like coin(🔒).

CAUTION Please be careful not to damage the brush.

maintain tools and filter

Power Pet Plus Brush (Option)

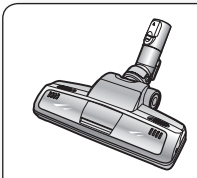

For improved pickup of pet hair and fibre on carpets.

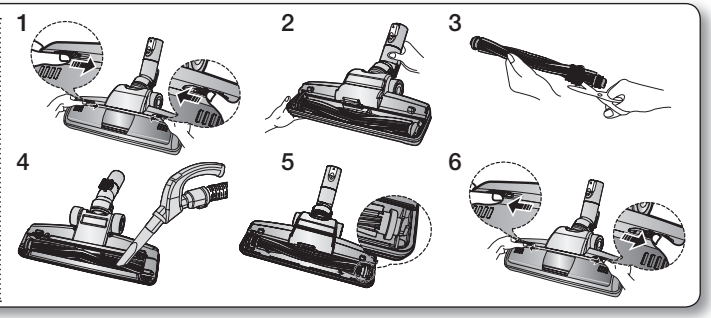

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Push the Open button of the transparent screen cover to separate the cover.
2. Remove the brushbar from the transparent screen.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a **dry** duster or crevice tool.
5. Insert brushbar into rotating belt and assemble.
6. Click the transparent screen cover back into place to reassemble.

EMPTYING THE DUST BIN

1

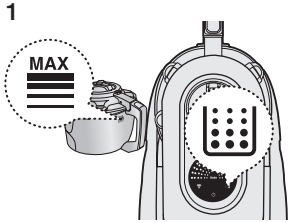

Once dust reaches the dust full mark, empty the dust bin.

2

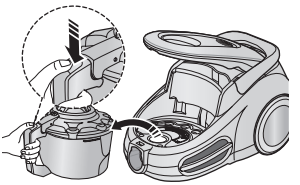

Take the dust bin out by pressing the button.

3

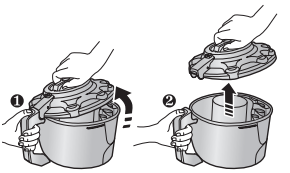

Separate the dust bin cover.

4

Throw the dust away in the bin.

5

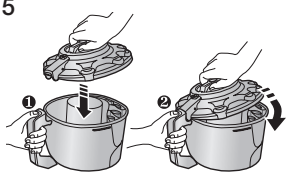

After emptying the dust bin, remove the obstacles like hair, fur on the cap of the dust bin.

6

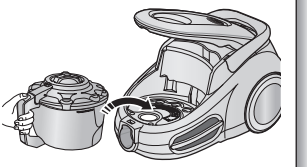

Before use, push the dust bin into the main body and press the cover dust of the vacuum cleaner until you hear the “click” sound.

maintain tools and filter

- Empty into a plastic bag.
  (recommended for asthma/allergy sufferers)

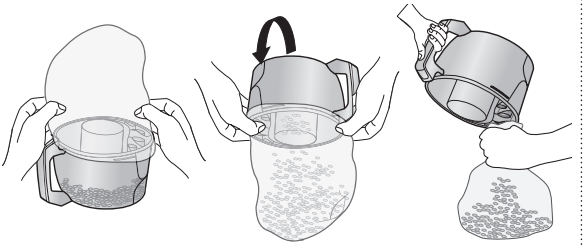

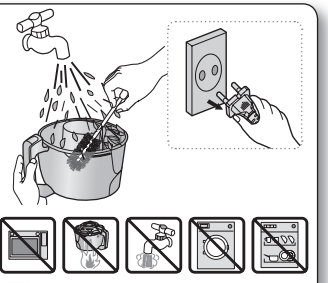

You may rinse the dust bin with cold water.

Option



When emptying any vacuum cleaner it is difficult to avoid exposure to dust. To minimize this risk, Please ensure that you encase the dust pot in a large bag to empty it and close the bag as tightly as possible round the pot. Remove the pot and close the bag as tightly and quickly as possible and dispose of this immediately. it is advisable to wear disposable gloves and a face mask while emptying the cleaner. If at all possible, ask a non allergy sufferer to empty the dust pot when required.

CLEANING THE DUST PACK

WHEN TO CLEAN THE DUST PACK

- The lamp will turn red when suction is reduced. If the light comes on, please clean the dust pack.

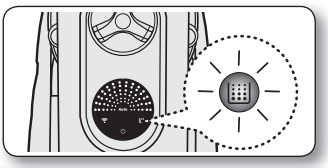

- Turn the vacuum power to 'MAX'.

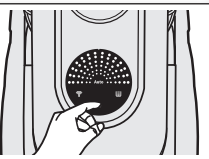

Body Control

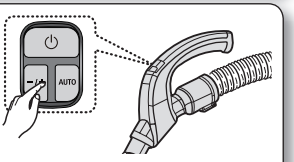

Handle Control

- If the filter check indicator turns red with the inlet floating 10cm above flat floor, clean the dust pack.

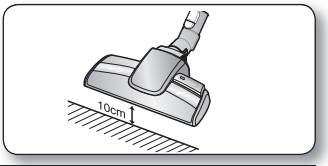

When suction is noticeably reduced continuously, please cleaning the dust pack.

CLEANING THE DUST PACK

1

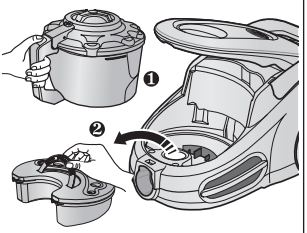

Remove the dust bin and dust pack as shown.

2

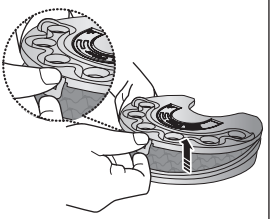

Remove the fixed frame of the dust pack cover.

3

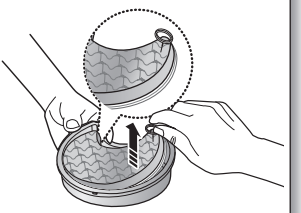

Remove the sponge and filter from the dust pack.

4

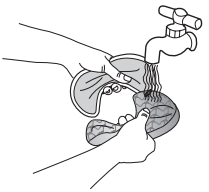

Wash the sponge and the filter of the dust pack with water.

5

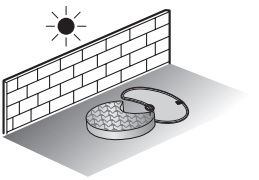

Let the sponge and filter dry in the shade for more than 12 hours.

6

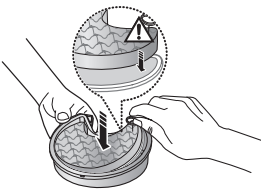

Put the sponge and filter into the dust pack.

7

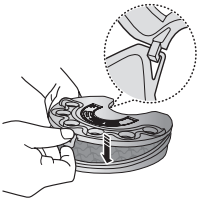

Before reassembly, align the dust pack cover and dust pack correctly.

8

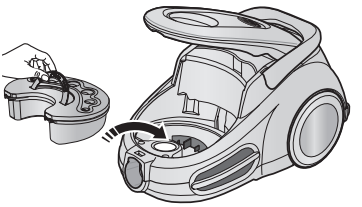

Put the assembled dust pack into the main body.

Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

maintain tools and filter

CLEANING THE MOTOR PROTECTION FILTER

- Take out both the dust bin and the dust pack.

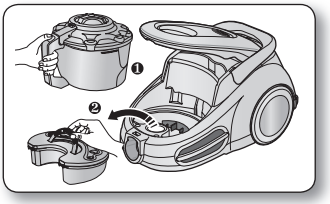

- Remove the motor protection filter from the mian body. Shake and tap the dust from it and put back in machine.

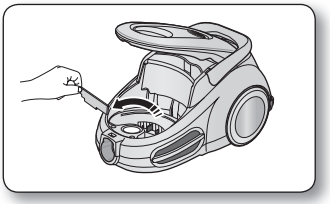

CLEANING THE OUTLET FILTER

1

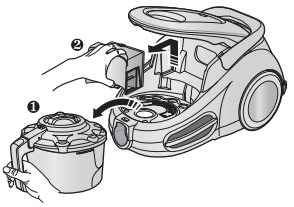

Remove the dust bin and HEPA Filter as shown.

2

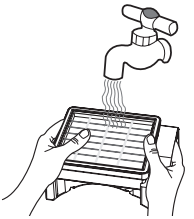

Clean the HEPA Filter.

3

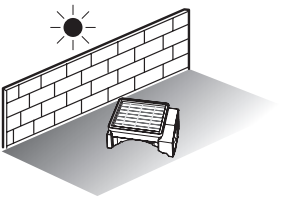

Let the HEPA Filter dry in the shade for more than 12 hours.

4

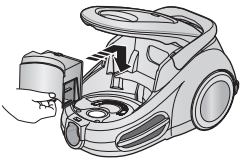

Put assemble HEPA Filter into the main body.

Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

maintain tools and filter

CHANGE THE BATTERY

1. When the vacuum cleaner does not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AAA.

CAUTION

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles.
4. Dispose of the batteries property.

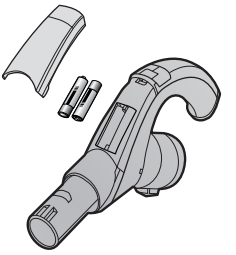

BATTERY TYPE : AAA Size

troubleshooting

PROBLEM	SOLUTION
Motor does not start	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing	• Check for blockage and remove.
Cord does not rewind fully	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions. if filters are out of condition change them to new ones.
Body overheating	• Please check filters, If required clean as illustrated in the instruction.
Static electicity discharge	• Please decrease power suction.

استكشاف الأخطاء وإصلاحها

المشكلة	الحل
المحرك لا يبدأ التشغيل	• افحص قابس الكبل والمأخذ. • اترك المحرك حتى يبرد .
قوة الامتصاص تتناقص تدريجيًا.	• افحص وجود انسداد ثم قم بإزالته.
لا تتم إعادة لف السلك بالكامل	• قم بسحب السلك للخارج مقدار ٢-٣ متر ثم اضغط زر إعادة لف السلك.
المكنسة لا تقوم بالتقاط الأتربة	• افحص الخرطوم واستبدله إذا لزم الأمر.
انخفاض أو تناقص الامتصاص	• يرجى التحقق من الفلتر وتنظيفه، عند الضرورة، كما هو موضح في التعليمات. إذا كان هناك تغير في حالة الفلاتر، استبدلها بأخرى جديدة.
السخونة الزائدة لجسم الجهاز	• يرجى التحقق من الفلاتر وتنظيفها، عند الضرورة، كما هو موضح في التعليمات.
تفريغ الكهرباء السكونية	• يرجى التقليل من امتصاص الطاقة.

أسئلة أو عالقة للمنتجات سامسونج يرجى االتصال بخدمة عمالء شركة سامسونج.

Country	Customer Care Center ☎	Web Site
U.A.E	800SAMSUNG (7267864)	www.samsung.com/ae

صيانة الأدوات والفلتر

غير البطارية

١. إذا لم تعمل المكنسة الكهربائية، استبدل البطاريات. وإذا استمرت المشكلة، يرجى الاتصال بالموزع المعتمد الخاص بنا.

٢. استخدم بطاريتين من الحجم AAA.

تنبيه

١. لا تقم بفك أو إعادة شحن البطاريات.
٢. لا تقم بتسخين البطاريات أو إلقاؤها في النار.
٣. لا تعكس الأقطاب الموجبة (+) والسالبة (-).
٤. تخلص من البطاريات بالشكل الملائم.

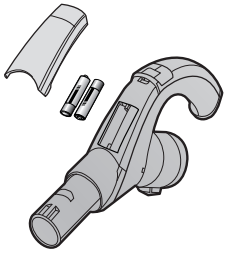

نوع البطارية: الحجم AAA

صيانة الأدوات والفلتر

تنظيف مرشح حماية المحرك

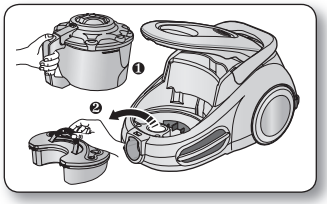

• أخرج كلاً من كيس الأتربة وعلبة الأتربة.

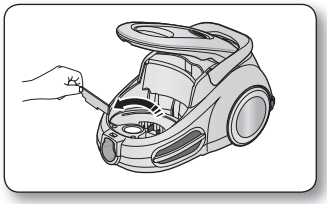

• انزع فلتر حماية الموتور من الهيكل الرئيسي. هز الأتربة ونظفها من المرشح ثم ضعه مرة أخرى في المكنسة.

تنظيف مرشح مخرج الهواء

١

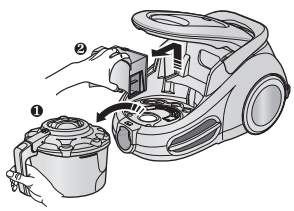

انزع صندوق الغبار وفلتر HEPA بالشكل الموضح.

٢

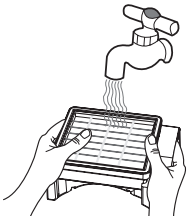

نظف فلتر HEPA.

٣

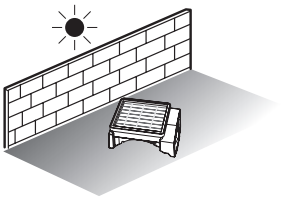

اترك فلتر HEPA في الظل لا يزيد عن ١٢ ساعة حتى يجف.

٤

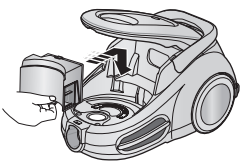

ركب فلتر HEPA في الهيكل الرئيسي.

تأكد من جفاف الفلتر بشكل كامل قبل إعادة تركيبه في المكنسة الكهربائية. اتركه لمدة ١٢ ساعة حتى يجف.

تنظيف علبة الأتربة

١

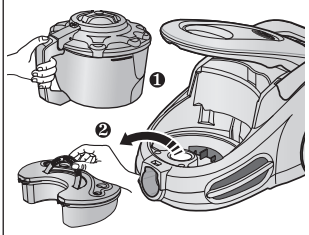

انزع صندوق الأتربة و كيس الأتربة كما هو موضح .

٢

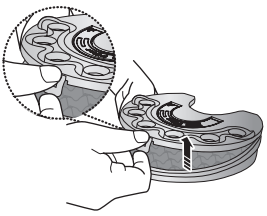

انزع الإطار الثابت لغطاء مجموعة الغبار.

٣

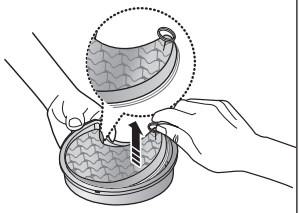

قم بإخراج الاسفنجة والفلتر من حاوية الأتربة.

٤

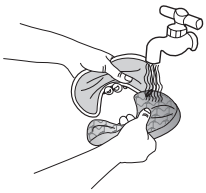

اغسل الاسفنجة وكيس فلتر الأتربة بالماء.

٥

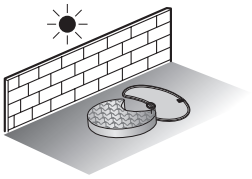

اترك الاسفنجة والفلتر يجفان في الظل لأكثر من ١٢ ساعة.

٦

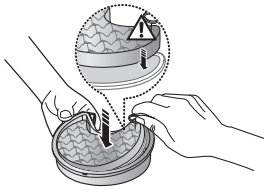

ضع الاسفنجة والفلتر في حاوية الأتربة.

٧

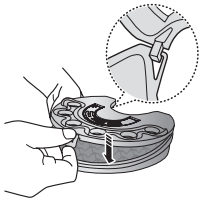

وقبل إعادة التركيب. قم بمحاذاة غطاء مجموعة الغبار ومجموعة الغبار بالشكل الصحيح.

٨

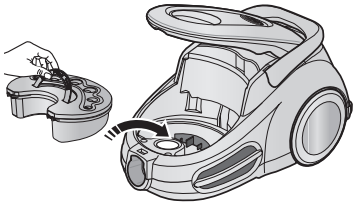

ضع كيس الأتربة بعد تركيبه في جسم المكنسة.

تأكد أن المرشح جاف تماماً قبل وضعه مرة أخرى في المكنسة. اتركه ١٢ ساعة ليجف.

صيانة الأدوات والفلتر

- أفرغ الأتربة في كيس بلاستيك.
(ينصح بهذا لمرضى الربو/والذين يعانون من الحساسية)

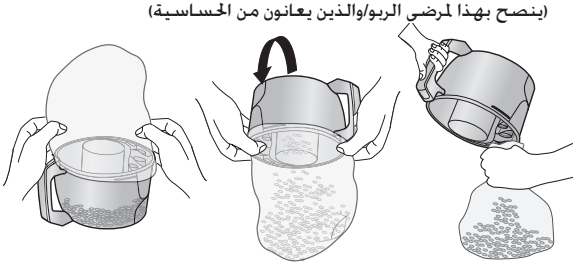

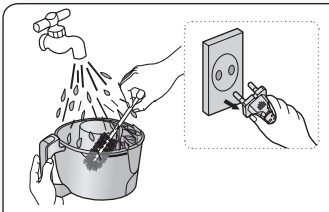

قد يتطلب الأمر شطف كيس الأتربة بالماء البارد.

الخيار

عند تفريغ أي مكنسة كهربائية فمن الصعب تجنب التعرض للغبار.
وللتقليل من هذه المخاطر، يرجى التأكد من احتواء وعاء الغبار في حقيبة كبيرة لتفريغه ثم أغلق الحقيبة حول الوعاء بأقصى قدر ممكن من الإحكام.
قم بإخراج الوعاء واغلق الحقيبة بأكبر قدر ممكن من الإحكام والسرعة وتخلص منه على الفور. يوصى بارتداء قفازات قابلة للإزالة وقناع وجه عند تفريغ المكنسة الكهربائية. وإن أمكن، اطلب من أحد الأشخاص لا يعاني من الحساسية أن يقوم بتفريغ وعاء الغبار عند الضرورة.



تنظيف مجموعة الغبار

متى يتم تنظيف علبة الأتربة

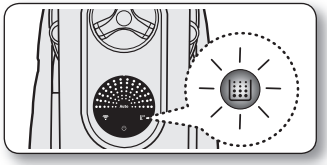

• سوف تتحول اللمبة إلى الضوء الأحمر عند انخفاض قوة الشفط.
وفي حالة إضاءة المصباح، يرجى تنظيف مجموعة الغبار.

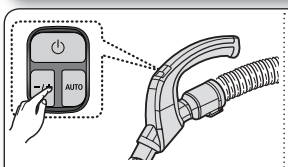

التحكم بالمقبض

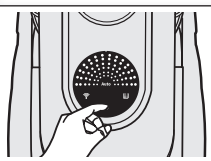

التحكم من جسم الجهاز

• قم بتغيير قوة المكنسة إلى <MAX> (الحد الأقصى).

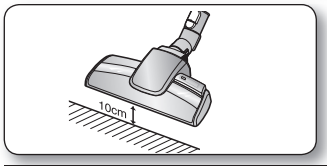

• في حال تحول مؤشر فحص الفلتر إلى اللون الأحمر مع طفو فتحة الإدخال بمقدار 10سم أعلى الأرضية المسطحة، قم بتنظيف مجموعة الغبار.

وفي حال تدني قوة الشفط بشكل ملحوظ وباستمرار، يرجى تنظيف مجموعة الغبار.

صيانة الأدوات والفلتر

الفرشاة القوية الفائقة لتنظيف شعر الحيوانات (اختيارية)

لالتقاط شعر الحيوانات الأليفة والألياف من التنجيد ومفارش السرير.

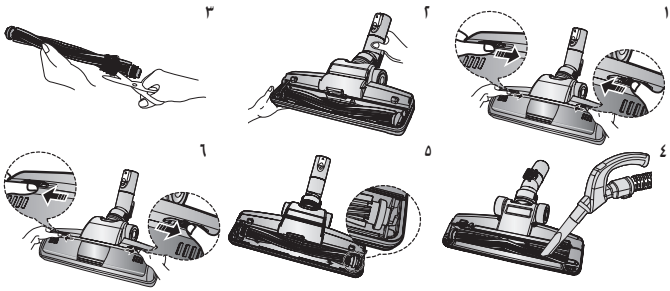

قد يتسبب التنظيف المتكرر للشعر أو وبر الحيوانات الأليفة باستخدام المكنسة الكهربائية في تدني الدوران بسبب الأشياء المتشابكة حول الأسطوانة. وفي هذه الحالة يجب تنظيف الأسطوانة بعناية.

١ . اضغط على زر الفتح الخاص بغطاء الحاجز الشفاف لفصل الغطاء.
٢ . قم بإزالة قضيب الفرشاة من الحاجز الشفاف.
٣ . قم بإزالة النفايات مثل الغبار والشعر المتشابك حول قضيب الفرشاة باستخدام مقص.
٤ . قم بإزالة الغبار المتراكم داخل مبيت الفرشاة باستخدام منفضة جافة أو أداة تنظيف الأماكن التي يصعب الوصول إليها.
٥ . أدخل قضيب الفرشاة في السير الدوار وقم بالتركيب.
٦ . انقر على غطاء الحاجز الشفاف لوضعه في مكانه للتركيب.

تفريغ كيس الأتربة

١

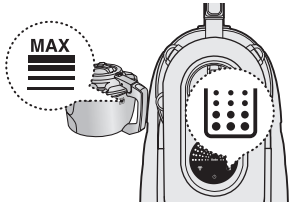

بمجرد وصول الغبار إلى علامة الامتلاء بالغبار، قم بتفريغ صندوق الغبار.

٢

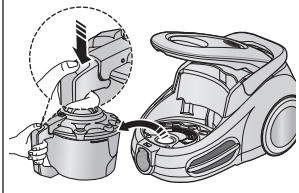

اسحب كيس الأتربة للخارج عن طريق الضغط على الزر.

٣

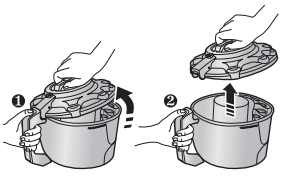

افصل غطاء كيس الأتربة.

٤

تخلص من الغبار في الصندوق.

٥

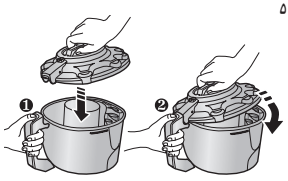

بعد تفريغ صندوق الغبار، قم بإزالة العوائق مثل الشعر والزغب الموجود على صندوق الغبار.

٦

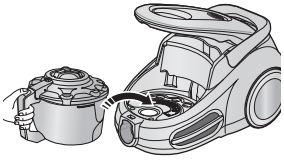

وقبل الاستخدام، ادفع صندوق الغبار في الجسم الرئيسي واضغط على غطاء الغبار الخاص بالمكنسة الكهربائية حتى تسمع صوت «نقرة».

صيانة الأدوات والفلتر

فرشاة الحيوانات الأليفة (اختياري)

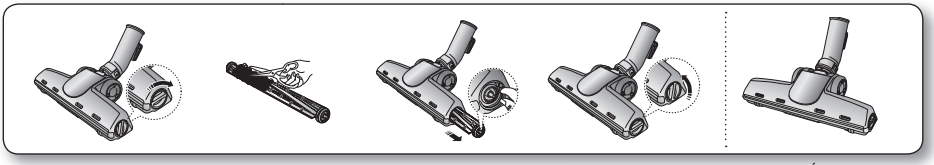

• فك غطاء الأسطوانة الشفاف لسهولة التنظيف.

فرشاة البطاطين (اختيارية)

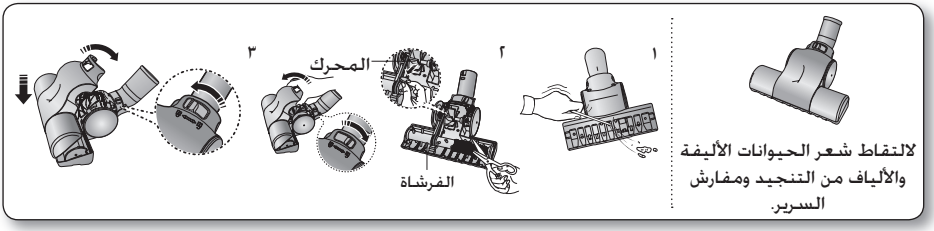

لالتقاط شعر الحيوانات الأليفة والألياف من التنجيد ومفارش السرير.

١ . أزل الفضلات تماماً إذا كان هناك انسداد بالفتحة.

٢ . أدر زر التأمين على ( ) "إلغاء التأمين". وأزل الفضلات.

٣ . لإعادة التجميع. قم بمحاذاة الغطاء بالحافة الأمامية للهيكل الرئيسي ثم أغلقه. بعد غلق الغطاء. تأكد أن زر التأمين مضبوط على وضع ( ) (تأمين).

تنبيه: للاستخدام مع الشراشف فقط. كن على حذر حتى تتجنب تلف الفرشاة أثناء إزالة الانسداد.

الفرشاة التربينية الفائقة (اختياري)

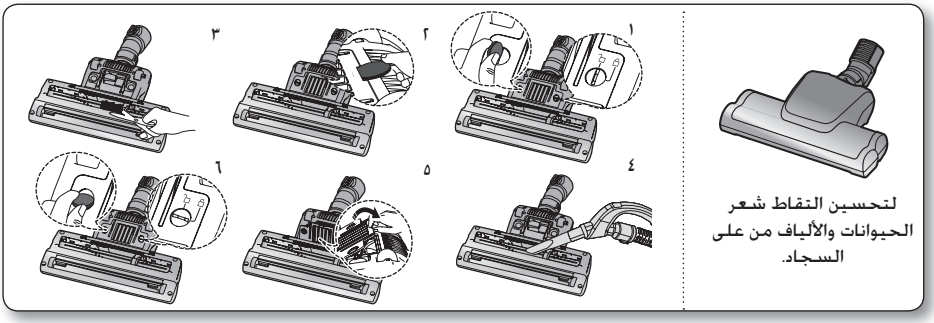

لتحسين التقاط شعر الحيوانات والألياف من على السجاد.

قد يتسبب التنظيف المتكرر للشعر أو وبر الحيوانات الأليفة باستخدام المكنسة الكهربائية في تدني الدوران بسبب الأشياء المتشابكة حول الأسطوانة. وفي هذه الحالة يجب تنظيف الأسطوانة بعناية.

١ . أدر زر القفل على وضع إلغاء القفل باستخدام ما يشبه العملة المعدنية ( ).

٢ . قم بإزالة دليل الهواء باستخدام ما يشبه العملة المعدنية.

٣ . قم بإزالة النفايات مثل الغبار والشعر المتشابك حول قضيب الفرشاة باستخدام مقص.

٤ . قم بإزالة الغبار المتراكم داخل مبيت الفرشاة باستخدام منفضة جافة أو أداة تنظيف الأماكن التي يصعب الوصول إليها.

٥ . ركب دليل الهواء.

٦ . أدر زر القفل على وضع القفل باستخدام ما يشبه العملة المعدنية ( ).

تنبيه: يرجى الانتباه لعدم التسبب في تلف الفرشاة.

صيانة الأدوات والفلتر

صيانة أدوات الأرضية

أنبوب مد الكوع (اختياري)

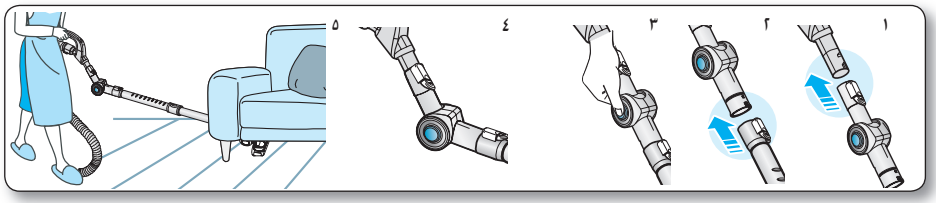

١. وصل أنبوب مد الكوع بجزء التوصيل الخاص بمقبض الخرطوم والأنبوب التليسكوبي.
٢. ثبت الأنبوبي التليسكوبي بالجزء السفلي من أنبوب مد الكوع.
٣. اضغط على الزر PUSH (اضغط).
٤. ومع الضغط على الزر PUSH يتم فرد أنبوب مد الكوع.
٥. يسمح لك استخدام أنبوب مد الكوع بتنظيف المناطق التي يصعب الوصول إليها (تحت الأثاث على سبيل المثال) دون الحاجة إلى الانحناء.

الفرشاة ثلاثية الاتجاهات (اختياري)

• قم بضبط زراع الإدخال حسب سطح الأرضية.
• قم بإزالة النفايات بالكامل في حالة انسداد المدخل.

٢- فرشاة الدواسة (اختيارية)

• قم بضبط زراع الإدخال حسب سطح الأرضية.
• قم بإزالة النفايات بالكامل في حالة انسداد المدخل.

الفرشاة الرئيسية للباركيه (اختياري)

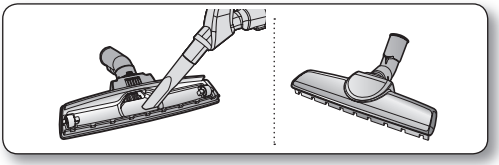

• قم بشفط الغبار في منطقة واسعة مرة واحدة.
• قم بإزالة النفايات بالكامل في حال انسداد فتحة الدخول.

صيانة الأدوات والفلتر

استخدام الملحقات

الملحق

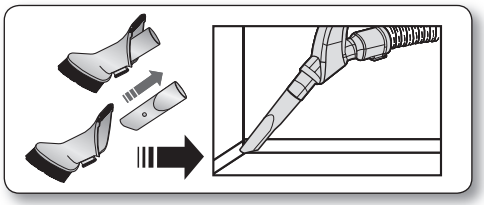

• اضغط على الملحق لإدخاله حتى نهاية مقبض الخرطوم.

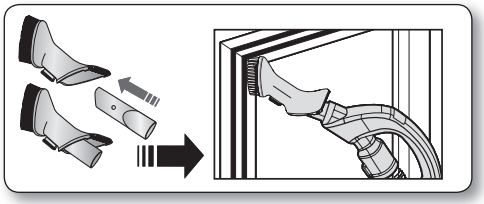

• لاستخدام أداة تنظيف الغبار، اضغط الملحق لإدخاله حتى نهاية مقبض الخرطوم.

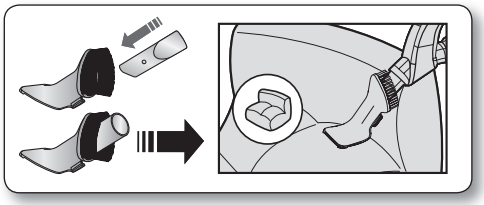

• لاستخدام أداة تنظيف التنجيد، اضغط الملحق لإدخاله حتى نهاية مقبض الخرطوم.

الماسورة

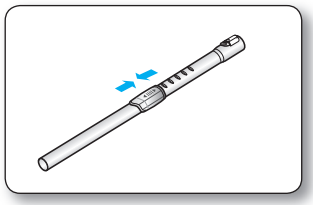

• قم بضبط طول الماسورة التليسكوبية من خلال تحريك زر التحكم في الطول الموجود في منتصف الماسورة التليسكوبية للخلف والأمام.

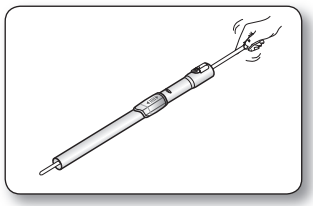

• لفحص وجود انسداد، قم بفصل الماسورة التليسكوبية وقم بضبطها على أقصر طول. سوف يسمح ذلك بسهولة إزالة النفايات التي تسد الأنبوبة.

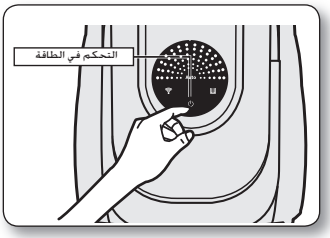

- الجسم

اضغط بتكرار على زر التحكم في الطاقة لاختيار الوضع الصحيح.

(تشغيل (الحد الأقصى) -< إيقاف التشغيل)

إذا لم يعمل جهاز التحكم عن بعد. يمكنك تشغيل المكنسة الكهربائية باستخدام زر التحكم الموجود في جسم الآلة.

	يُشير ضوء الأشعة تحت الحمراء إلى الجزء المستقبل لإشارة الأشعة تحت الحمراء من جهاز التحكم عن بعد اليدوي.
	يضيء مصباح الفلتر إذا كانت مجموعة الغبار تتطلب الفحص أو التفريغ. سوف تسمع إشارة صوتية أيضًا.
Auto	يُشير ذلك إلى اختيار وضع الشفط التلقائي. تتم الإشارة إلى مستوى الشفط عن طريق شاشة صمام الضوء المزدوج (LED).

تشغيل المكنسة

سلك الطاقة

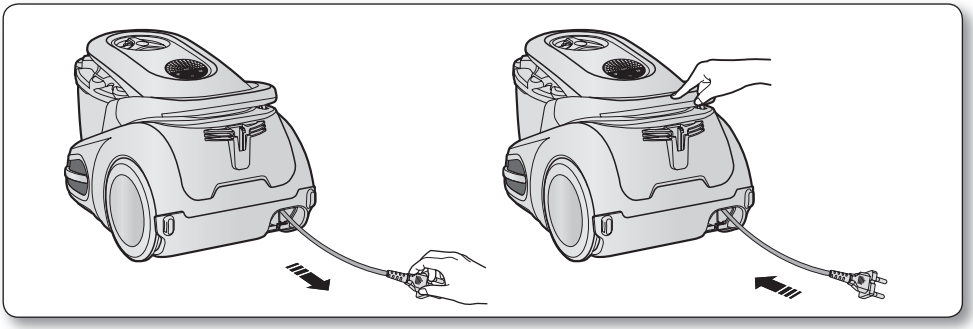

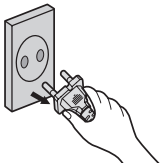

تنبيه

• عند نزع القابس من المأخذ الكهربائي. قم بالإمساك بالقابس وليس السلك.

التحكم في الطاقة (التحكم بالأشعة تحت الحمراء)

- الخرطوم

١. تشغيل/إيقاف المكنسة الكهربائية (⏻)

اضغط على زر التشغيل/الإيقاف لتشغيل المكنسة الكهربائية.
اضغط مرة أخرى لإيقاف تشغيل المكنسة الكهربائية.

٢. المكنسة الكهربائية (-,+)

اضغط بتكرار على زر الوضع لاختيار الوضع الصحيح.

(تشغيل) الحد الأدنى -< متوسط -< الحد الأقصى

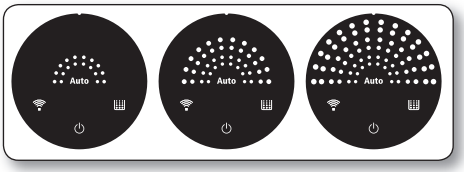

٣. استخدام الوضع تلقائي

اضغط على الزر تلقائي للتشغيل التلقائي للمكنسة الكهربائية.

★ لا تغطي قاذف المقبض عند استخدام زر التحكم في المقبض.

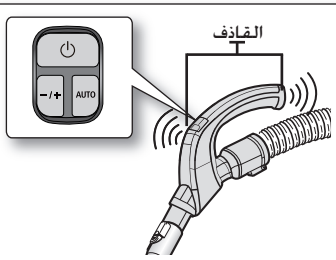

التحكم اليدوي
يتم التحكم في المكنسة الكهربائية باستخدام إشارات الأشعة تحت الحمراء.

تجميع المكنسة

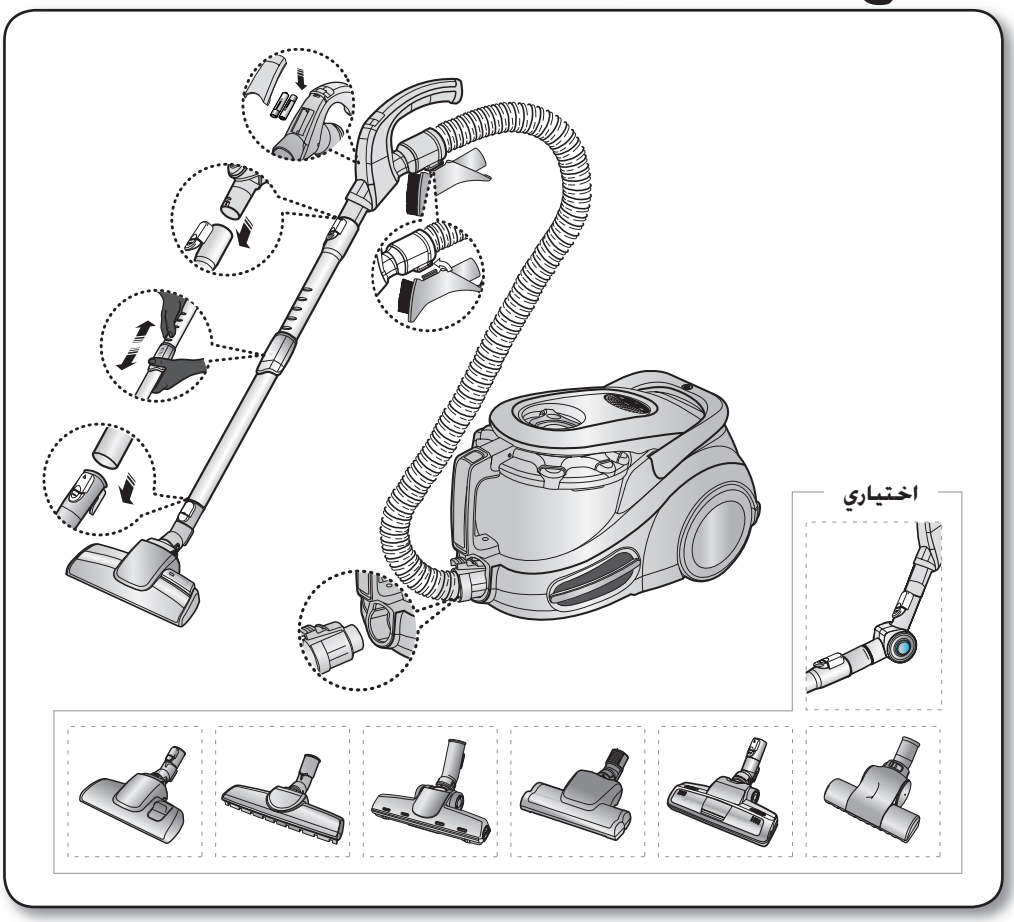

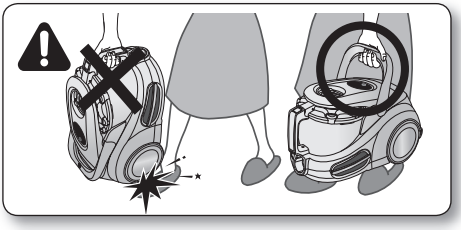

• الرجاء عدم الضغط علي زر مقبض صندوق الأتربة عند حمل الجهاز .

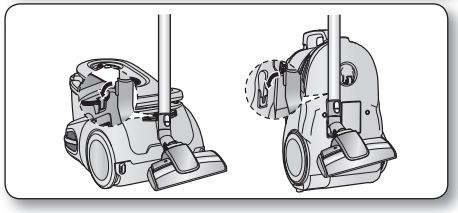

• للتخزين، قم بتجميع فوهة الأرضية.

المحتويات

تجميع المكنسة
٥

٥ تجميع المكنسة

تشغيل المكنسة
٦

٦ سلك الطاقة
٧ التحكم في الطاقة

صيانة الأدوات والفلتر
٨

٨ استخدام الملحقات
٩ صيانة أدوات الأرضية
١١ تفريغ كيس الأتربة
١٢ تنظيف مجموعة الغبار
١٤ تنظيف مرشح حماية المحرك
١٤ تنظيف مرشح مخرج الهواء
١٥ غير البطارية

استكشاف الأخطاء وإصلاحها
١٦

معلومات السلامة

احتياطات هامة

١. اقرأ كافة التعليمات بعناية. وقبل التشغيل، تأكد من أن فرق الجهد لمصدر التيار الكهربائي بنفس القيمة المشار إليها على لوحة التقييم أسفل المكنسة.

٢. تحذير: لا تستخدم المكنسة عندما تكون السجادة أو الأرضية مبللة.
لا تستخدم المكنسة لشفط المياه.

٣. يجب الإشراف عن قرب عن استخدام الجهاز بواسطة الأطفال أو بالقرب منهم.

لا تسمح باستخدام المكنسة كلعبة. لا تسمح بتشغيل المكنسة بدون رقابة في أي وقت.
لا تستخدم المكنسة إلا في الغرض المقصود منها الموضح في هذه التعليمات.

٤. لا تستخدم المكنسة الكهربائية بدون صندوق الأتربة .

قم بإفراغ صندوق الأتربة قبل امتلاءه للحفاظ علي أعلي مستوي من الكفاءة.

٥. لا تستخدم المكنسة في التقاط أعواد الثقاب أو الرماد الحي أو أعقاب السجائر. احرص على إبعاد المكنسة عن الأفران أو مصادر التسخين الأخرى. يمكن أن تؤدي الحرارة إلى تشويه أو تغيير لون الأجزاء البلاستيكية للوحدة

٦. تجنب التقاط الأجسام الصلبة أو الحادة باستخدام المكنسة لأنها قد تؤدي إلى تلف أجزاء المكنسة. تجنب الوقوف على الخرطوم. تجنب وضع أوزان على الخرطوم. لا تقم بسد منفذ الشفط أو منفذ العادم.

٧. احرص على إيقاف تشغيل المكنسة من المفتاح الموجود على جسم المكنسة قبل فصل المكنسة عن المأخذ الكهربائي. قم بفصل القابس عن المأخذ الكهربائي قبل تغيير كيس الأتربة أو حاوية الأتربة. لتجنب التلف، برجاء إزالة القابس من خلال الإمساك بالقابس نفسه وليس من خلال سحب السلك.

٨. هذا الجهاز غير معد للاستخدام من جانب الأطفال الصغار أو الأشخاص المعاقين بدون إشراف ما لم تتم مراقبتهم بصورة كافية بواسطة شخص مسئول لضمان قدرتهم على استخدام الجهاز بأمان.

٩. يجب الإشراف على الأطفال الصغار للتأكد من أنهم لا يلعبون بالجهاز.

١٠. يجب نزع القابس من المأخذ قبل تنظيف أو صيانة الجهاز.

١١. لا يوصى باستخدام سلك تطويل.

١٢. إذا لم يتم تشغيل المكنسة بشكل صحيح، قم بإيقاف تشغيل الطاقة ثم استشر وكيل خدمة مخول.

١٣. في حالة حدوث تلف في كبل التزويد بالطاقة، يجب أن يتم استبداله بواسطة المصنع، أو وكيل الخدمة أو شخص مؤهل لهذا العمل لتجنب المخاطر.

١٤. تجنب حمل المكنسة من خلال الإمساك بالخرطوم. استخدم المقبض الموجود على وحدة المكنسة.

١٥. قم بفصل التيار عن المكنسة في حالة عدم استخدامها. قم بإيقاف تشغيل الطاقة قبل نزع القابس.

معلومات السلامة

معلومات السلامة

- قبل تشغيل الجهاز، برجاء قراءة هذا الدليل بالكامل والاحتفاظ به كمرجع لك. تحذير

- نظرًا لأن تعليمات التشغيل التالية تغطي مجموعة متنوعة من الطرازات، فقد تكون خصائص المكنسة الخاصة بك مختلفة نوعًا ما عن تلك الموضحة في هذا الدليل. تحذير

رموز التنبيه/التحذير المستخدمة

تحذير	يشير إلى وجود خطر يسبب الوفاة أو إصابة خطيرة.
تنبيه	يشير إلى خطر يسبب إصابة شخصية أو تلف في الممتلكات.

الرموز الأخرى المستخدمة

	يمثل شيء يجب عدم القيام به.
	يمثل شيء يجب اتباعه.
	يشير إلى أنه يجب فصل سلك الطاقة عن المأخذ.

المكنسة
دليل المستخدم

Arabic

* قبل استخدام هذه الوحدة برجاء قراءة التعليمات بعناية.
* للاستخدام الداخلي فقط.

تخيل الإمكانات

شكرًا على شراء منتج Samsung للحصول على.
خدمة كاملة، برجاء تسجيل المنتج لديك على الموقع
www.samsung.com/register

SAMSUNG

Code No. DJ68-00467H REV(0.1)